




PRESSURE WASHER OPERATING INSTRUCTIONS

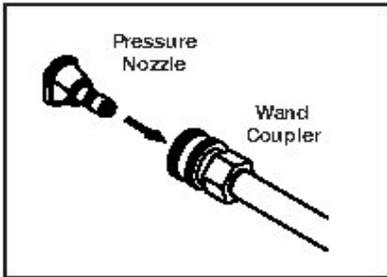


STEP 1: Pull the spring-loaded collar of the wand coupler back to insert your choice of pressure nozzle.

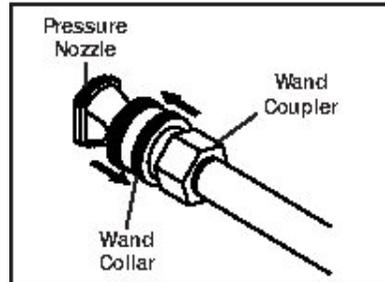


STEP 2: Release the coupler collar and push the nozzle until the collar clicks. Pull the nozzle to make sure it is sealed properly.

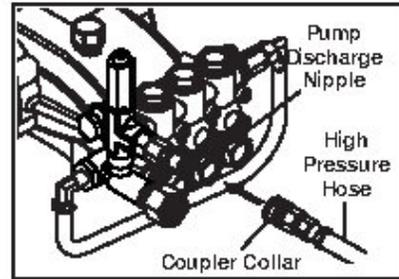


STEP 3: Connect the high pressure Hose to the pump discharge nipple. Push coupler collar forward until secure.

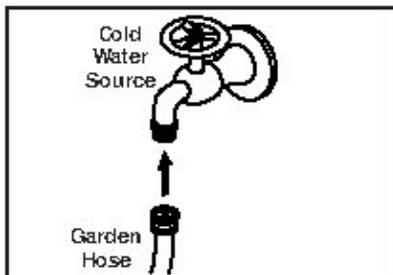


STEP 4: Connect (7.5m) garden hose to the cold water source.

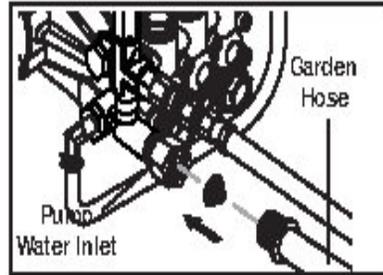


STEP 5: Check inlet filters, remove debris, then connect the garden hose to pump water inlet.

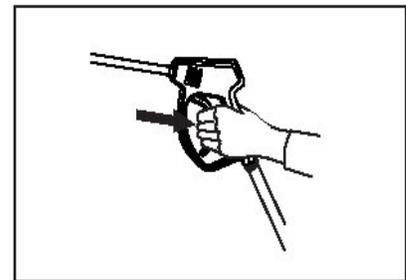


STEP 6: Trigger the spray gun to Eliminate trapped air then wait for a steady flow of water to emerge from the spray nozzle.

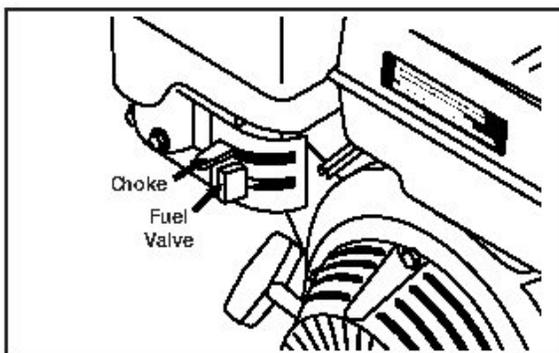

STEP 7: Rotate the fuel shut-off valve to the "On" position. Slide the fuel valve lever to the "On" position. When the engine is not in use, leave the fuel valve in the "Off" position.

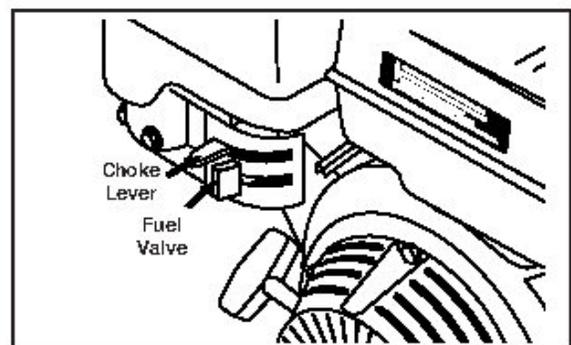


STEP 8: Move the choke lever to the "Choke" position (on a warm engine, leave the choke lever in the run position). Move the choke lever to the "Closed" position. To restart a warm engine, leave the choke lever in the "Open" position.

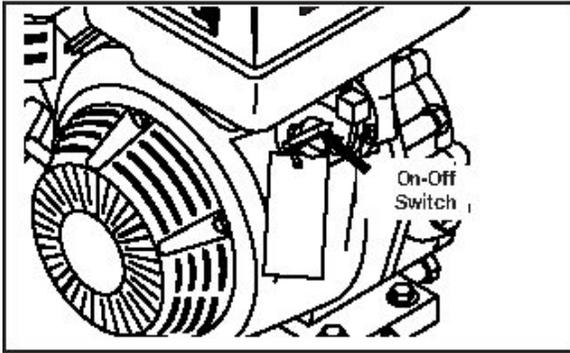


STEP 9: Turn the engine switch to "On" position. On Briggs engines, move the throttle lever to "Fast" position, shown on the engine as a rabbit.

CAUTION: Exhaust cover is extremely hot!
Please handle with caution.

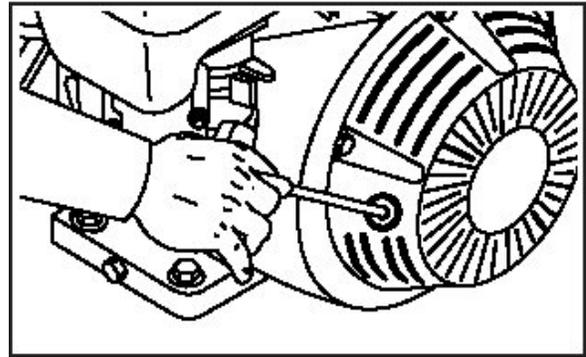


STEP 10: Pull the starter grip. If the engine fails to start after 2 pulls, squeeze the trigger gun to release pressure and repeat step. Return starter gently. After the engine warms up enough to run smoothly, move choke to run position and throttle to fast position.

CAUTION: Small engines may kick back. Do not hold pull starter grip tightly in hand.

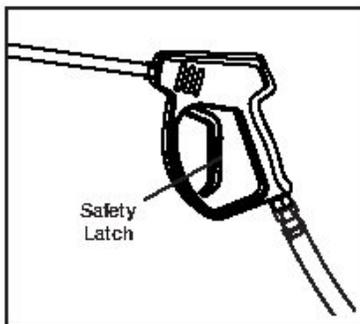

WARNING: Never replace nozzles without engaging the safety latch on the spray gun trigger.

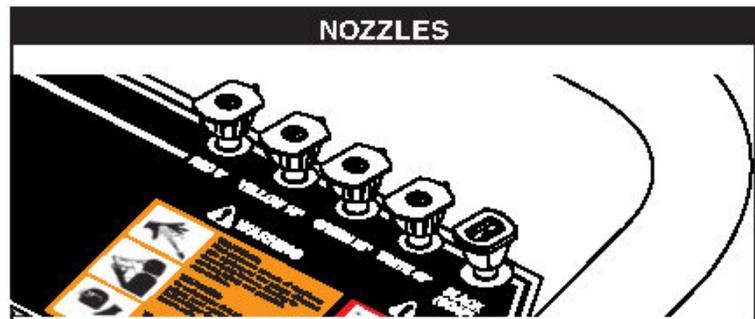

The three different nozzle sizes included with rental are: 15, 25, and 40 degree tips. Also included are extra "O rings" on the handle.

*zero degree and soap tips are not included in rental.

SHUT DOWN PROCEDURE:

1. Turn off engine
2. Turn off hose at the faucet
3. Depressurize the gun
4. Disconnect all hoses
5. Return tip to the handle